

# Assembly Instructions

C9

## For Metamorphic Style Floor and Table Lamps


### Component Parts

- A Lamp Stem
- B Cord
- C Nylon Sleeve
- D Clutch
- E Knob

### To Install

1. Carefully unpack the lamp from the carton.
2. Place nylon sleeves (C) over the cord (B) near the lamp stem (A). The larger end of the sleeve should be oriented up toward the stem.
3. Insert the cord into the clutches (D) by guiding the cord through the notch in each clutch. Make sure one nylon sleeve is located just above each clutch.
4. Snap the nylon sleeves down into the clutches.
5. Slide the lamp stem down through the nylon sleeves.
6. For models utilizing two piece lamp stems, apply a drop of the supplied thread locking compound to the threads and screw the lower stem into the upper stem. It is important that the ring at the end of the lower stem is located below the lower clutch. This limits the height to which the stem can be raised and ensures the stability of the lamp.
7. The knob (E) is tightened and loosened as necessary to move the lamp stem and adjust tension.

**Note:** Only the upper clutch is equipped with a knob. The lower clutch serves as a guide to keep the arm straight.

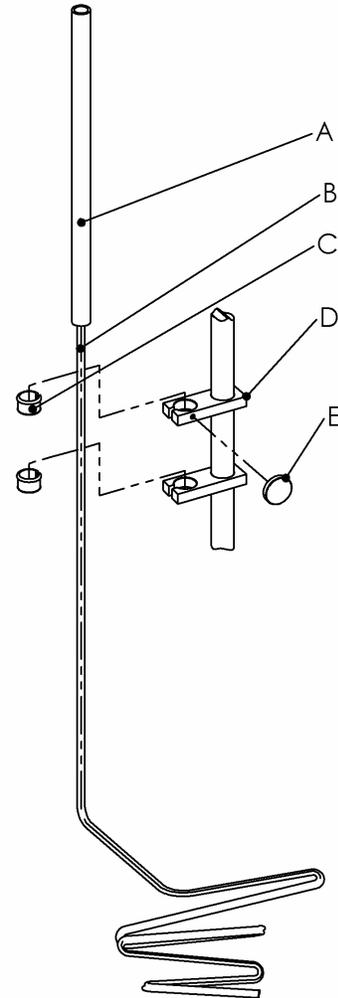

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product.

We hope you enjoy your fixture!