

# ASSEMBLY & INSTALLATION INSTRUCTIONS

G31

Direct Burial Post, Round 390272, and Square 390172

---



390272



390172

(Shown in Instructions)

# ASSEMBLY & INSTALLATION INSTRUCTIONS

G31

Direct Burial Post, Round 390272, and Square 390172

**CAUTION: FAILURE TO INSTALL THIS POST PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE.** We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

## To Install (Figure 1)

**CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.**

### SITE PREPARATION:


1. Run appropriate wiring to the site of the fixture, leaving enough excess wire to reach the top of the post, plus 12 inches.
2. Excavate a hole 12"-15" in diameter and approximately 20" deep or deeper depending on frost line in your area.
3. Add approximately 2" of gravel or crushed stone to the bottom of the hole for drainage.

### INSTALLATION:

**NOTE: Post may be cut to desired height before installation.**

4. Insert wire into wireway hole 10" from the bottom of post leaving 12" extending beyond the top of the post.
5. Insert post in center of the hole bracing on 3 sides.
6. Pour concrete into hole leaving approximately 4" of space above concrete.
7. Allow concrete to harden before removing the braces.
8. Cover concrete with your surrounding top layer.
9. Follow individual fixture instructions to complete installation.

**NOTE:** Be careful not to allow concrete to enter the bottom of the post or wireway hole.

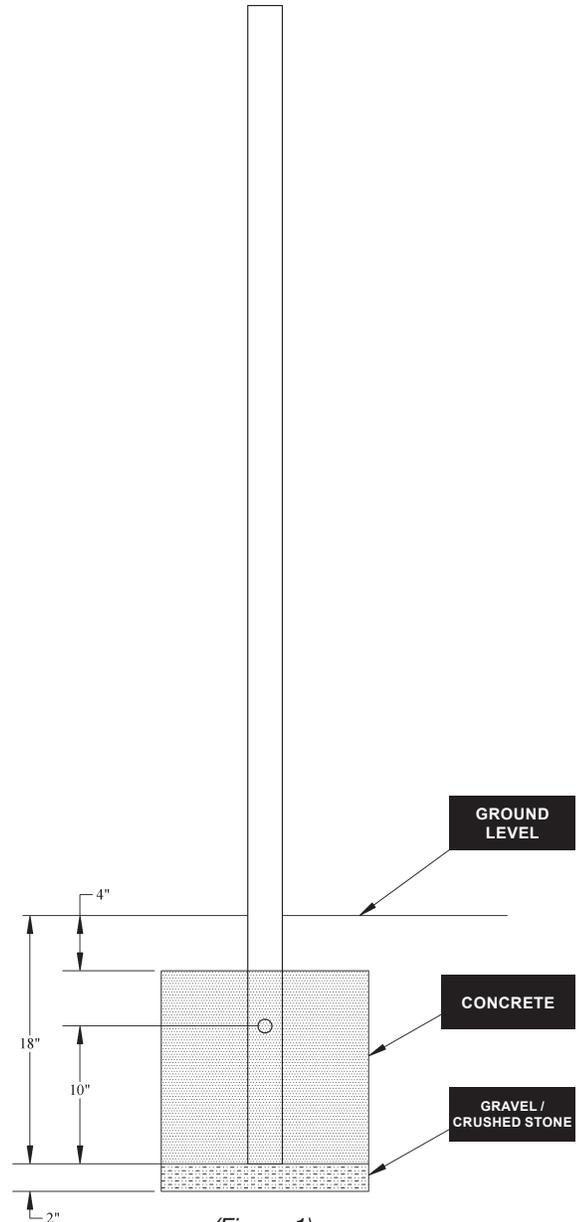

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

**\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.**