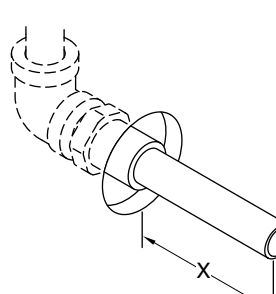
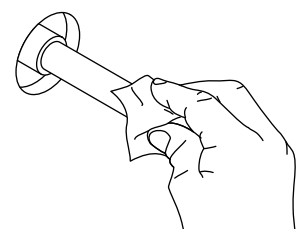
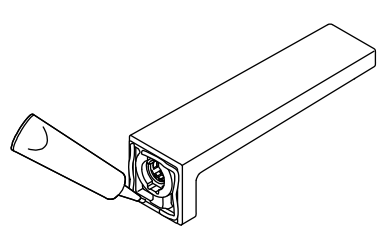
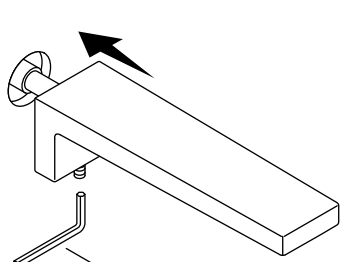
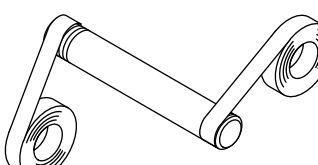
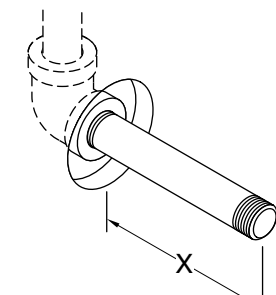
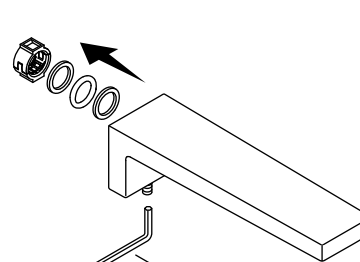
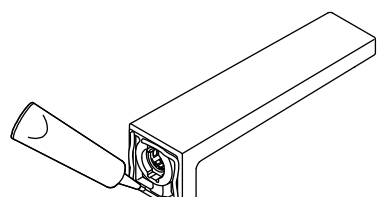
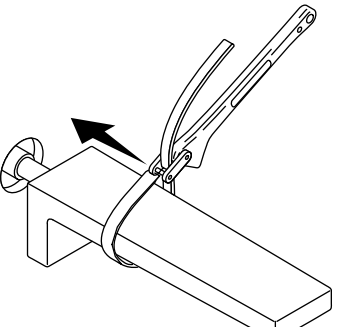
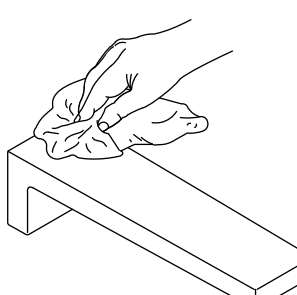


- Plus:**
- 1-1/4" copper tube or 1/2" nipple
  - Emery paper

<p><b>Record your model number.</b></p>	<p><b>Important Information</b> Observe all local plumbing and building codes.</p>	<p><b>1 Slip-Fit Spout:</b> Install the tube 1-1/4" (32 mm) from the wall.</p> 	<p>Use emery paper to remove burrs.</p> 	<p>Apply plumbers putty or sealant to the spout, leaving a gap at the bottom.</p> 
<p>Loosen the setscrew. Slide the spout against the wall. Tighten the setscrew.</p> 	<p><b>2 Threaded Spout:</b> Apply sealant tape to a 1/2" nipple.</p> 	<p>Install the nipple 1-3/8" (35 mm) from the wall.</p> 	<p>Loosen the setscrew to remove the slip-fit assembly.</p> 	<p>Apply plumbers putty or sealant to the spout, leaving a gap at the bottom.</p> 
<p>Use a clean strap wrench to install the spout.</p> 	<p><b>3 Wipe away excess sealant.</b></p> 			

Questions? Problems? For additional assistance, please contact  
KALLISTA's Customer Service Department at 1-888-4-KALLISTA  
(1-888-452-5547) or [kallista.com](http://kallista.com).