


KALLISTA®

Installation Guide

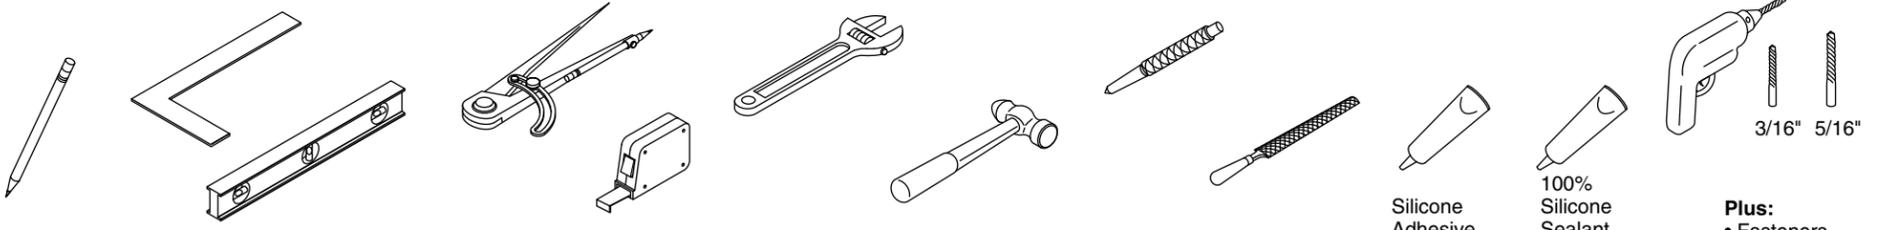

Silicone Adhesive

100% Silicone Sealant

Plus:
• Fasteners



Record your model number below for future reference:

CAUTION: Risk of personal injury.
Product can break, chip, and cause injury if handled carelessly. Get help lifting the lavatory.

Instructions are for installation to wood frame construction. For other installations, use bracing and fasteners of sufficient size and strength.

1 Install 2x6 backing behind the finished wall.

2 Mark the centerline on the floor and wall.

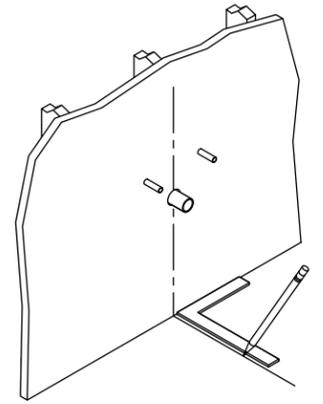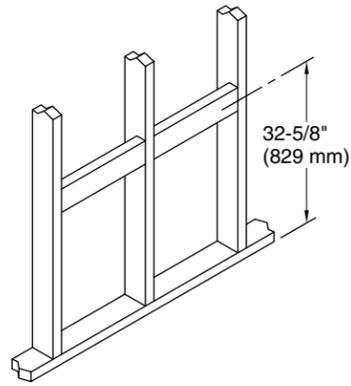






3 Mark the floor where shown, and drill two 5/16" (8 mm) holes 1/2" (13 mm) deep.

4 Measure and mark the hole locations on the wall on both sides of the centerline.

5 Secure the leg frame brackets to the wall with appropriate fasteners. The setscrew notch should face the floor.

6 Drill 3/16" pilot holes. Level and secure the mounting brackets with appropriate fasteners.

7 Using a compass, locate and draw an outline of the faucet holes on the top of the table.

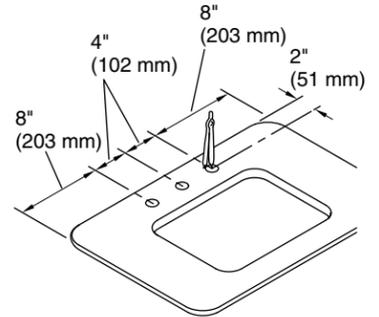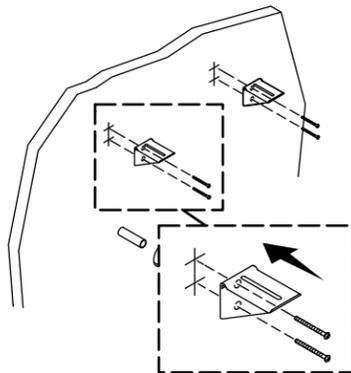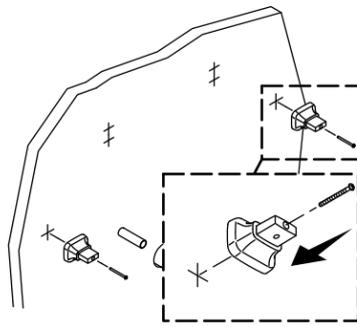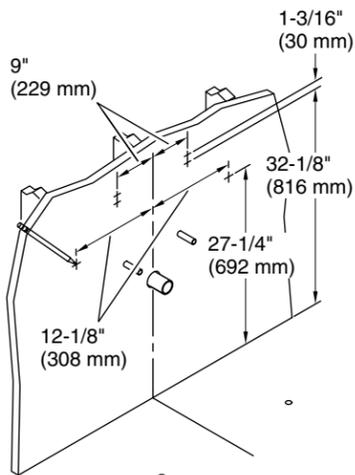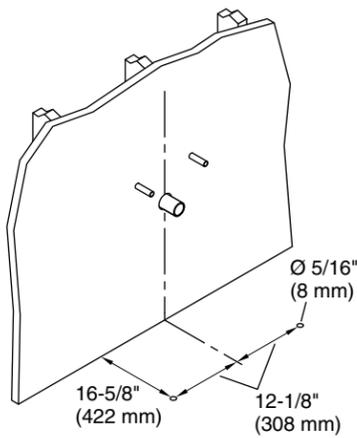






8 On the top of the table, position a punch in the center of the marked hole. Gently tap the punch with a hammer.

9 Use the punch and a file to enlarge the hole as needed.

10 Generously apply 100% silicone sealant around the rim of the sink.

11 Place the table upside down. Position the sink over the hole.

12 Rotate the clips over the rim. Tighten the fasteners and trim excess fastener length. Wipe away excess 100% silicone sealant.

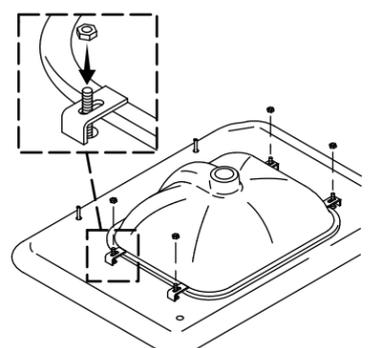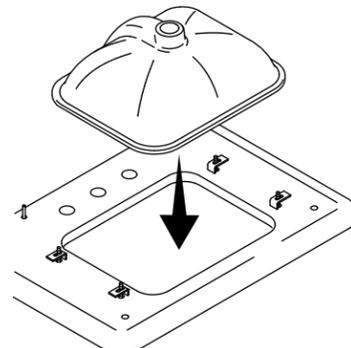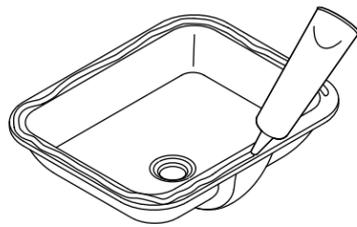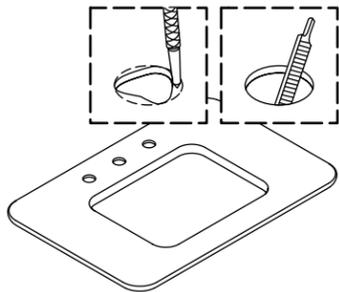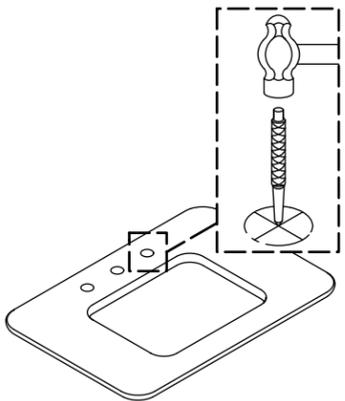






13 Install the faucet.

14 Install a threaded adjustment pad into each leg support.


15 Assemble the bracket, escutcheon, nut, and bolt. The bolt should stick up no more than 1/2" (13 mm) higher than the escutcheon.

16 Assemble and press together the leg frame assemblies. Secure with the setscrews.


17 Insert the threaded adjustment pads into the floor holes. Assemble the leg frame assemblies to the leg frame brackets. Tighten the setscrews.

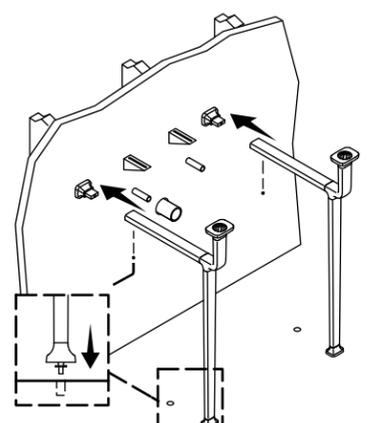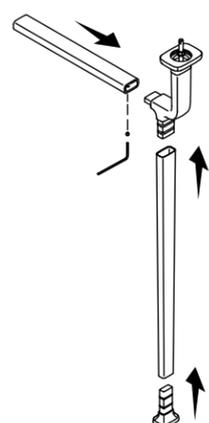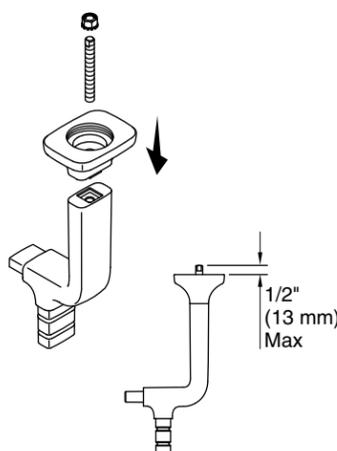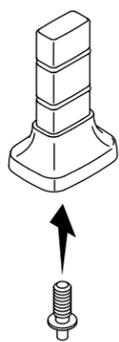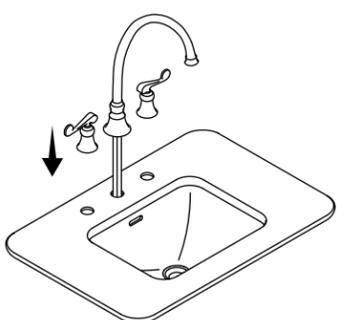


18 Apply 100% silicone sealant to the tops of the escutcheons. Place the table onto the legs and the wall brackets. Provide a 1/4" (6 mm) gap between the table and wall and secure the table to the brackets.

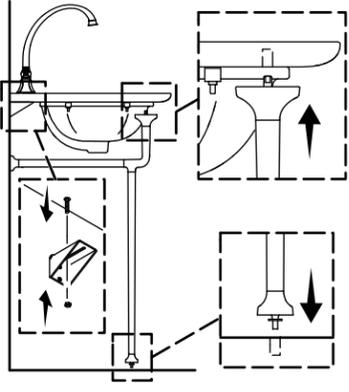

19 Check the table for level, and adjust by turning the threaded adjustment pads.

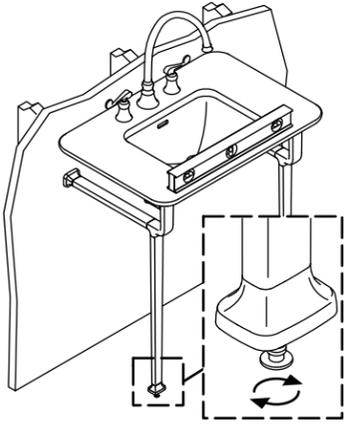

20 Install the drain.

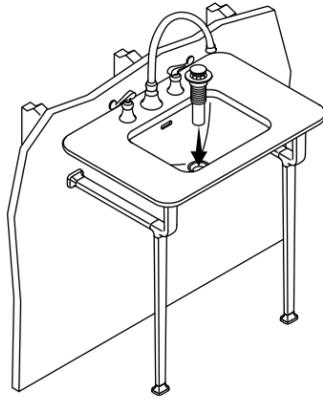

21 Make the final faucet and drain connections. Check for leaks.

